

CLAMP CODES

NOTE: OTHER CLAMP & COUPLING SIZES AND CONFIGURATIONS ARE AVAILABLE

Repair Clamp Codes	Description - 316 SS PN16 - 200 Long	DN SIZE
KCR-102B-085	080X200L CLAMP REPAIR 85-95 PN16 316SS	80
KCR-102B-095	080X200L CLAMP REPAIR 95-105 PN16 316SS	80
KCR-102B-100	100X200L CLAMP REPAIR 100-110 PN16 316SS	100
KCR-102B-110	100X200L CLAMP REPAIR 110-120 PN16 316SS	100
KCR-102B-114	100X200L CLAMP REPAIR 114-124 PN16 316SS	100
KCR-102B-120	100X200L CLAMP REPAIR 120-130 PN16 316SS	100
KCR-102B-130	100X200L CLAMP REPAIR 130-140 PN16 316SS	100
KCR-102B-140	100X200L CLAMP REPAIR 140-150 PN16 316SS	100
KCR-102B-150	150X200L CLAMP REPAIR 150-160 PN16 316SS	150
KCR-102B-160	150X200L CLAMP REPAIR 160-170 PN16 316SS	150
KCR-102B-175	150X200L CLAMP REPAIR 175-185 PN16 316SS	150
KCR-102B-190	150X200L CLAMP REPAIR 190-200 PN16 316SS	150
KCR-102B-200	200X200L CLAMP REPAIR 200-210 PN16 316SS	200
KCR-102B-210	200X200L CLAMP REPAIR 210-220 PN16 316SS	200
KCR-102B-215	200X200L CLAMP REPAIR 215-225 PN16 316SS	200
KCR-102B-220	200X200L CLAMP REPAIR 220-230 PN16 316SS	200
KCR-102B-230	200X200L CLAMP REPAIR 230-240 PN16 316SS	200



CLAMP CODES

NOTE: OTHER CLAMP & COUPLING SIZES AND CONFIGURATIONS ARE AVAILABLE

Repair Clamp Codes	Description - 316 SS PN16 - 300 Long	DN SIZE
KCR-103D-085	080X300L CLAMP REPAIR 85-95 PN16 316SS	80
KCR-103D-095	080X300L CLAMP REPAIR 95-105 PN16 316SS	80
KCR-103D-100	100X300L CLAMP REPAIR 100-110 PN16 316SS	100
KCR-103D-110	100X300L CLAMP REPAIR 110-120 PN16 316SS	100
KCR-103D-120	100X300L CLAMP REPAIR 120-130 PN16 316SS	100
KCR-103D-130	100X300L CLAMP REPAIR 130-140 PN16 316SS	100
KCR-103D-140	100X300L CLAMP REPAIR 140-150 PN16 316SS	150
KCR-103D-150	150X300L CLAMP REPAIR 150-160 PN16 316SS	150
KCR-103D-160	150X300L CLAMP REPAIR 160-170 PN16 316SS	150
KCR-103D-168	150X300L CLAMP REPAIR 168-178 PN16 316SS	150
KCR-103D-175	150X300L CLAMP REPAIR 175-185 PN16 316SS	150
KCR-103D-190	150X300L CLAMP REPAIR 190-200 PN16 316SS	150
KCR-103D-200	200X300L CLAMP REPAIR 200-210 PN16 316SS	200
KCR-103D-210	200X300L CLAMP REPAIR 210-220 PN16 316SS	200
KCR-103D-215	200X300L CLAMP REPAIR 215-225 PN16 316SS	200
KCR-103D-220	200X300L CLAMP REPAIR 220-230 PN16 316SS	200
KCR-103D-230	200X300L CLAMP REPAIR 230-240 PN16 316SS	200
KCR-103D-240	225X300L CLAMP REPAIR 240-250 PN16 316SS	200
KCR-103D-250	225X300L CLAMP REPAIR 250-260 PN16 316SS	225
KCR-103D-255	225X300L CLAMP REPAIR 255-265 PN16 316SS	225
KCR-104D-250	225X300L CLAMP REPAIR 250-260 PN16 316SS	225
KCR-104D-255	225X300L CLAMP REPAIR 255-265 PN16 316SS	225
KCR-104D-270	250X300L CLAMP REPAIR 270-280 PN16 316SS	250
KCR-104D-275	250X300L CLAMP REPAIR 275-285 PN16 316SS	250
KCR-104D-285	250X300L CLAMP REPAIR 285-295 PN16 316SS	250
KCR-104D-310	300X300L CLAMP REPAIR 310-320 PN16 316SS	300
KCR-104D-320	300X300L CLAMP REPAIR 320-330 PN16 316SS	300
KCR-104D-330	300X300L CLAMP REPAIR 330-340 PN16 316SS	300
KCR-104D-340	300X300L CLAMP REPAIR 340-350 PN16 316SS	300



Repair Clamp Codes	Description - 316 SS PN16 - 400 Long	DN SIZE
KCR-105F-088	080X400L CLAMP REPAIR 88-98 PN16 316SS	80
KCR-105F-110	100X400L CLAMP REPAIR 110-120 PN16 316SS	100
KCR-105F-120	100X400L CLAMP REPAIR 120-130 PN16 316SS	100
KCR-105F-140	100X400L CLAMP REPAIR 140-150 PN16 316SS	100
KCR-105F-150	150X400L CLAMP REPAIR 150-160 PN16 316SS	150
KCR-105F-160	150X400L CLAMP REPAIR 160-170 PN16 316SS	150
KCR-105F-175	150X400L CLAMP REPAIR 175-185 PN16 316SS	150
KCR-105F-200	200X400L CLAMP REPAIR 200-210 PN16 316SS	200
KCR-105F-225	200X400L CLAMP REPAIR 225-235 PN16 316SS	200
KCR-105F-250	225X400L CLAMP REPAIR 250-260 PN16 316SS	225
KCR-105F-270	250X400L CLAMP REPAIR 270-280 PN16 316SS	250
KCR-105F-275	250X400L CLAMP REPAIR 275-285 PN16 316SS	250
KCR-105F-285	250X400L CLAMP REPAIR 285-295 PN16 316SS	250
KCR-105F-310	300X400L CLAMP REPAIR 310-320 PN16 316SS	300
KCR-105F-330	300X400L CLAMP REPAIR 330-340 PN16 316SS	300
KCR-105F-340	300X400L CLAMP REPAIR 340-350 PN16 316SS	300
KCR-210F-360	375X400L CLAMP REPAIR 360-380 PN16 316SS	375
KCR-210F-380	375X400L CLAMP REPAIR 380-400 PN16 316SS	375
KCR-210F-390	375X400L CLAMP REPAIR 390-410 PN16 316SS	375
KCR-210F-400	375X400L CLAMP REPAIR 400-420 PN16 316SS	375
KCR-210F-410	375X400L CLAMP REPAIR 410-430 PN16 316SS	375
KCR-210F-420	375X400L CLAMP REPAIR 420-440 PN16 316SS	375
KCR-210F-440	375X400L CLAMP REPAIR 440-460 PN16 316SS	375
KCR-210F-450	450X400L CLAMP REPAIR 450-470 PN16 316SS	450
KCR-210F-490	450X400L CLAMP REPAIR 490-510 PN12 316SS	450
KCR-210F-500	450X400L CLAMP REPAIR 500-520 PN12 316SS	450
KCR-315F-500	450X400L CLAMP REPAIR 500-530 PN16 316SS	450

