YARDWORKS

DUAL-OUTLET DIGITAL TIMER

- **PROGRAMMING FOR THE DIGITAL OUTLET OF THE TIMER**

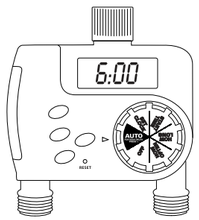

INSTALLING THE BATTERIES

- Remove the tray on the back of the timer by sliding it out.
- Insert two AA (1.5V) alkaline batteries (not included) and replace the tray.
- Replace batteries when low battery icon appears.

INSTALLATION

- Attach timer to an outdoor hose faucet and turn on after programming.

PROGRAMMING THE TIMER

- Rotate the dial to positions indicated or setup.
- Press station button to switch between station 1 and 2 for all programming.

SET CLOCK

- Press the + button to advance clock time (hold button for quick advance).
- Press the – button to reverse clock time (hold button for quick reverse).

START TIME

- Press the + button to advance start time (hold button for quick advance).
- Press the – button to reverse start time (hold button for quick reverse).

HOW LONG

Set watering duration from 1 to 240 minutes using the + and – buttons.

HOW OFTEN

Set watering frequency as every 6 hrs, 12 hrs, or from 1 to 7 days using the + and – buttons. 1 is every day, 2 is every other day etc. up to 7 days.

AUTO

Timer waters according to programmed time, station, duration, and frequency.

RAIN DELAY

- When in **AUTO**, press + button for 24 hrs, 48 hrs, or 72 hrs.
- Screen will flash between clock and hours remaining before programmed cycle resumes.
- To remove rain delay, turn dial to **OFF** and then back to **AUTO**.

MANUAL/HAND WATERING

To water without interrupting the set cycle, press [MANUAL] button and then use + and – buttons to set from 1 to 240 minutes.

- To remove manual watering (turn off), turn dial to **OFF**.
- To resume programmed cycle turn the dial back to **AUTO**.

TROUBLESHOOTING

Water does not come on at desired time.
Check if:

- Clock is set to correct time including AM and PM.
- Start time is set to desired time including AM and PM.
- Rain Delay is on.

Timer does not water.
Check if:

- Timer is set to AUTO.
- Hose faucet is on.
- Batteries are low.
- Clock is set to correct time including AM and PM.
- Rain Delay is on.

Water won't turn off.
Check if:

- Watering duration is set to desired time.
- Start times begin after previous watering cycle has run through all stations and set durations.

WHEN EXPECTING FREEZING TEMPERATURES, TIMERS SHOULD BE REMOVED FROM THE HOSE BIB TO AVOID POTENTIAL FREEZE DAMAGE.

PN 91188-24 rA

MODEL 91188

Printers are responsible for meeting print production requirements. Any changes must be approved by the client and Fluid Studio.
PRINTED PIECE MUST MEET DESIGNATED SPECIFICATIONS ON THIS FORM.

© 2011 Fluid Studio. This work is the property of Fluid Studio, and cannot be used, reproduced or distributed in any way without their express permission.

DIMENSIONS:
FLAT: W: 12.0" **H:** 6.0"
FINISHED: W 3.0" **D:** 0 **H** 3.0"

COLORS
Registration — color non printing Die — color non printing Product Position — PMS ???
Black — PMS ??? — color non printing Glue Area — PMS ???

ADDITIONAL INSTRUCTIONS:
- Font sizes cannot be smaller than 7 pt.
- Proofing Code:

PROOF NO: 2
DATE: 08.02.11
DES: SH **SPCE:** SH
JOB NO: N/A
CLIENT: ORBIT
SKU: 91188
UPC: N/A
FILE NAME: 91188-24 rA.indd
SOFTWARE: InDesign CS5

FLUID
P 801 295 9820
F 801 951 5815
www.fluid-studio.net
1065 South 500 West
Bountiful, Utah 84010

MINUTERIE NUMÉRIQUE À DOUBLE PRISE

- **PROGRAMMATION POUR LA PRISE NUMÉRIQUE DE LA MINUTERIE**

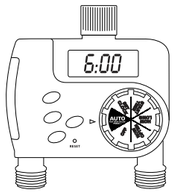

INSTALLATION DES PILES

- Enlevez le plateau au dos de la minuterie en le faisant glisser à l'extérieur.
- IInsérez deux piles alcalines AA (1,5V) (non comprises) et remettez le plateau.
- Remplacez les piles quand l'icône de pile faible apparaît.

INSTALLATION

- Fixez la minuterie au robinet extérieur du tuyau et mettez en marche après programmation.

PROGRAMMATION DE LA MINUTERIE

- Faites tourner le cadran aux positions indiquées pour le réglage.
- Appuyez sur le bouton de station pour changer entre station 1 et station 2 pour toutes les programmations.

RÉGLER L'HORLOGE

- Appuyez sur la touche + pour avancer l'heure (maintenez-la enfoncée pour une avance rapide).
- Appuyez sur le bouton – pour retarder l'heure de l'horloge (continuez à appuyer sur le bouton pour retarder rapidement)

HEURE DE DÉMARRAGE

- Appuyez sur le bouton + pour avancer l'heure de démarrage (continuez à appuyer sur le bouton pour avancer rapidement)
- Appuyez sur le bouton – pour retarder l'heure de démarrage (continuez à appuyer sur le bouton pour retarder rapidement)

DURÉE

Réglez la durée d'arrosage de 1 à 240 minutes avec les boutons + et –.

FRÉQUENCE

Réglez la fréquence d'arrosage toutes les 6 heures, 12 heures ou de 1 à 7 jours en utilisant les boutons + et –. 1 est tous les jours, 2 est tous les deux jours, etc. jusqu'à 7 jours.

AUTO

La minuterie arrose suivant l'heure, la station, la durée et la fréquence programmées.

DÉLAI PLUIE

- En AUTO, appuyez sur le bouton + pour 24 heures, 48 heures ou 72 heures.
- L'écran clignote entre les heures et les minutes restantes avant la reprise du cycle programmé.
- Pour enlever le délai pluie, tournez le cadran sur OFF puis le remettre sur AUTO.

ARROSAGE MANUEL

Pour arroser sans interrompre le cycle réglé, appuyez sur le bouton [MANUAL] puis utilisez les boutons + et – pour régler entre 1 et 240 minutes.

- Pour enlever l'arrosage manuel (arrêter) tournez le cadran sur OFF.
- Pour remettre en route le cycle programmé, remettez le cadran sur AUTO.

DÉPANNAGE

L'eau n'arrive pas à l'heure souhaitée.
Vérifiez si :

- L'horloge est réglée à l'heure appropriée, notamment A.M. et P.M.
- L'heure de démarrage est réglée à l'heure désirée y compris AM et PM.
- Le Délai Pluie est activé

La minuterie ne commande pas l'arrosage.
Vérifiez si :

- La minuterie est réglée à AUTO
- Le robinet du tuyau est ouvert
- Les piles sont faibles
- L'horloge est réglée correctement, y compris sur AM ou PM.
- Le Délai Pluie est activé

L'eau ne s'arrête pas.
Vérifiez si :

- La durée d'arrosage est réglée à l'heure souhaitée
- Les heures de début qui commencent après le cycle d'arrosage précédent sont passées à toutes les stations et les durées se sont écoulées.

LORSQUE LA TEMPÉRATURE RISQUE DE PASSER SOUS LE POINT DE GEL, LES MINUTERIES DEVRAIENT ÊTRE RETIRÉES DES ROBINETS D'ARROSAGE POUR ÉVITER DES DOMMAGES ÉVENTUELS CAUSÉS PAR LE GEL.